

FIRE DOOR 12

LVH44 AIR TRANSFER GRILLE FITTED INTO TIMBER FRAME WITH TAB PLATE FIXINGS

DESCRIPTION

- 1** Timber frame as part of associated doorset framing system
- 2** Lorient intumescent sealant around air transfer grille perimeter to a maximum clearance of 10mm
- 3** Lorient LVH44 intumescent air transfer grille
- 4** 2mm intumescent liner
- 5** **Fixing tab:** 40 x 20 x 1mm thick minimum galvanised steel tabs fixed to LVH44 unit with self tapping screws and to timber frame with wood screws

Fixing option 1: 20mm wide tabs, central to all four sides or at 200mm maximum centres


Fixing option 2: Full width tabs top and bottom only with 200mm fixing centres

CONTENTS

- LVH44 air transfer grille
- 2mm intumescent liner
- Cover grille (optional)

TOOLS REQUIRED

- Tab plate fixings
- Self tapping screws (3.5 x 16mm)
- 25mm wood screws
- Lorient intumescent sealant

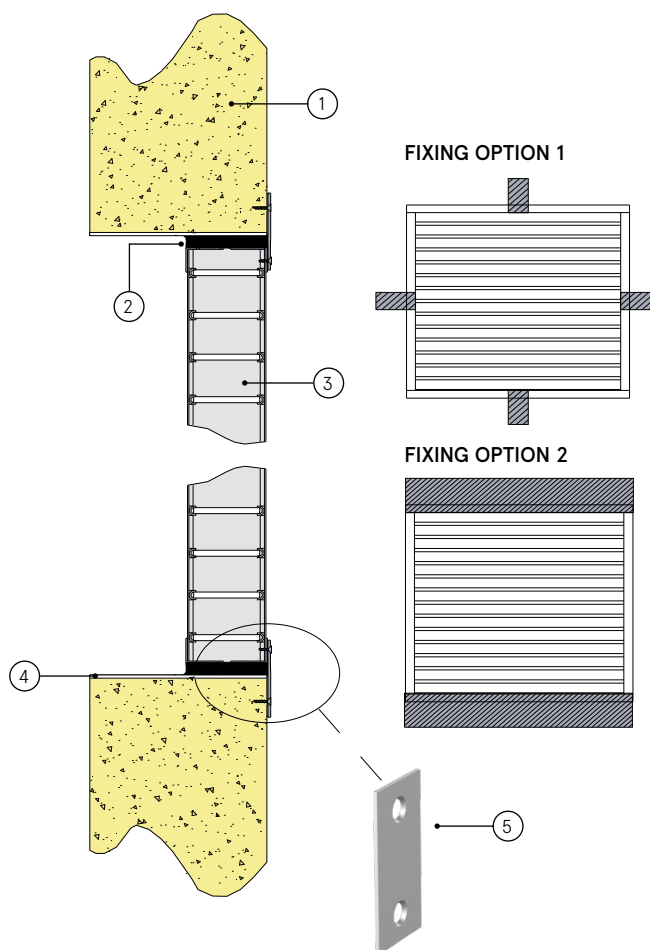

LVH44 for timber frame with tab plate fixings

FD30/FD60

Fire Resistance in accordance with

BS 476-22:1987

Approval Ref

WFR C121316 (AW4T2)

Max single cell size

Any rectangular shape up
to 1200 x 600mm

LVH44 air transfer grilles are supplied 2mm
less than the nominal size e.g. a 300mm x
300mm is actually 298mm x 298mm.

INSTALLATION INSTRUCTIONS

- ▶ Apply Lorient intumescent liner to the inside faces of the aperture.
- ▶ Fix the mounting tabs onto the LVH44 air transfer grille using self tapping screws to **one side only**.
- ▶ Insert LVH44 into timber frame. (Note: air transfer grille does not have to be centrally positioned in the opening).
- ▶ Fix the tabs to the timber frame with wood screws.
- ▶ Apply a bead of Lorient intumescent sealant around the perimeter of LVH44 as shown (note: maximum clearance of 10mm applies).
- ▶ **Note: Fixings supplied by others.**