





BS EN ISO 9001
Cert No. Q6104

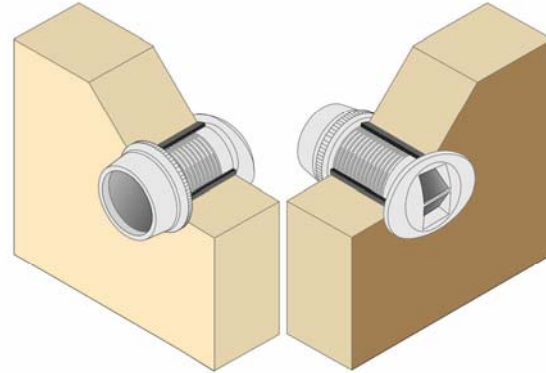

INSTALLATION OF FIRE RESISTANT WIDE ANGLE VIEWER

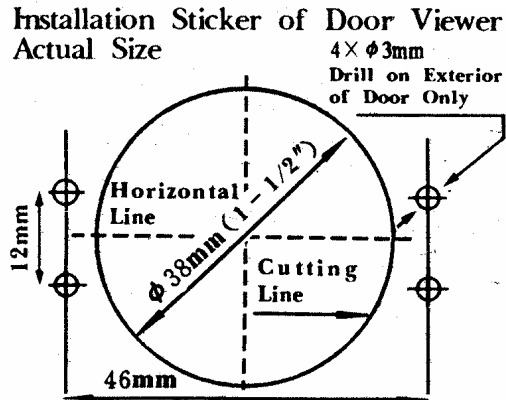

NOTE: PLEASE INCREASE THE OVERALL DIAMETER OF THE CUT HOLE BY 4mm – 38mm TO 42mm DIAMETER TO ALLOW FOR THE INTUMESCENT CLADDING KIT

CLADDING KIT SUPPLIED SEPARATELY

1. Put the installation template / sticker enclosed on the desired position of the door, ensuring that the horizontal line on the template is aligned with the actual horizon.
2. Drill the holes indicated on the template, allowing for the cladding kit as per the note above.
3. Remove the template.
4. Unscrew the front end of the Wide Angle Viewer and place it on the holes from the exterior side of the door.
5. Peel off the self-adhesive backing on the intumescent cladding kit and place around the main body of the Wide Angle Viewer.
6. Put the main body of the Wide Angle Viewer through the hole from the interior side of the door and screw onto the front end.
7. Tighten the nut to secure the Wide Angle Viewer on the door.

LORIENT Polyproducts Ltd, Fairfax Road, Heathfield Ind Estate, Newton Abbot, Devon, TQ12 6UD

Tel: +44 (0) 1626 834252

Fax: +44 (0) 1626 833166