


# FIRTREE® LAS1011 PERIMETER SEAL FITTING GUIDE

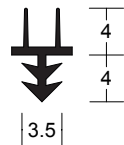

LENGTH \_\_\_\_\_

**CONTENTS**

- FIRTREE® LAS1011 seal

**TOOLS REQUIRED**

- Tape measure
- Pencil or marker
- Router with 3mm cutter
- Scissors, knife or snips

**NOTE**

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

For more information please call:

**+852 2505 0328**

**STEP 1**

Remove the seal from the packaging and measure the door height to determine the seal length required. Cut lengths to suit door frame.

**STEP 2**

Groove the door or frame 3mm wide x 4mm deep.

**STEP 3**

Push fit the Firtree® LAS1011 seal into the groove.



Gasketing materials for fire doors intended for application to wood and plastic covered composite and wood core doors rated up to 1.5 hours. Listed steel frames and/or classified steel covered composite, hollow metal doors rated up to 3 hours.

V1



Lorient Pacific Ltd  
Unit A2, 5/F Wing Tai Centre  
12 Hing Yip Street  
Kwun Tong  
Hong Kong

**+852 2505 0328**  
**www.lorienthk.com**

All rights reserved. No part of this fitting guide may be reproduced, stored in a retrieval system, or transmitted in any means, electronic, mechanical, photocopying, recording or otherwise without the written permission of Lorient Polyproducts Limited.  
© Lorient Polyproducts Ltd 2019