


# LAS6001 MAGNETIC SEAL

## FITTING GUIDE

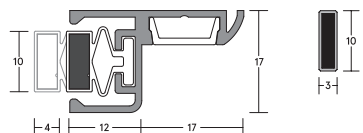

LAS6001

LAS6001

### CONTENTS

- LAS6001 magnetic seal
- Bag of screws

### TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Saw, hand or power
- Router (rebated installation)

### NOTE

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

For more information please call:

**+852 2505 0328**

## INSTALLATION DETAIL

### NOTE

As magnetic seals can also repel and may require reversal for both seals to attract, check magnetic attraction of seals before cutting to size and fixing.

**Timber doors: To be used in conjunction with LAS6001. This is rebated into door face (10mm x 3mm).**

### STEP 1

Measure door frame height/width and machine cut lengths to suit.

### NOTE

Machine cut mitred joints are recommended wherever possible. Before mitre cutting corner joints, ensure that seals will fix to jambs or door as specified.

### STEP 2

Lightly screw fix lengths to jambs using screws supplied. Fixing holes are pre-drilled and slotted to allow seals to be accurately fitted and adjusted as required.

### STEP 3

Close door and adjust seal to ensure a uniform seal around door.

### STEP 4

Tighten fixing screws as required.

### NOTE

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

