


LAS7006 SI MEETING STILE SEAL FITTING GUIDE

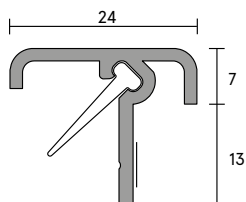

CONTENTS

- LAS7006 si meeting stile seal
- Screw pack

TOOLS REQUIRED

- Tape measure
- Pencil or marker
- Saw (power/hack)
- 2.5mm drill bit and countersink
- Drill
- Screw driver
- Knife
- Router (rebated installation).

NOTE

Recommendations as to methods, use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

For more information please call:

+44 (0)1626 834252

INSTALLATION DETAIL

This product is face fixed. It is not necessary to remove the door from its hinges unless otherwise specified.

Prior to fixing seal in place, ensure all surfaces are smooth and clean; do not use oil based solvents – methylated spirit or alcohol is suitable.

STEP 1

Remove the seal from the packaging and measure the height of the meeting stile.

STEP 2

Slide out the gasket and cut the aluminium carrier to the required length.

STEP 3

Measure and cut the silicone gasket to length. Slide the silicone gasket back into the aluminium carrier. Ends of the aluminium channel may be centre punched or glued if necessary to prevent gasket movement.

STEP 4

Determine the door handing & position the carrier against the appropriate meeting stile. Mark out the hole locations with a pencil at approximately 200mm centres using the groove as a guide.

STEP 5

Move the carrier to a suitable workstation and drill and countersink the pencil marks to suit the screws provided.

STEP 6

Remove the release tape from the self-adhesive and fit carrier to the meeting stile, applying even pressure.

STEP 7

Using a 2.5mm drill bit, pre-drill through the existing drill holes. Using a screw driver, fit screws provided.

STEP 8

Close the door and ensure the seal makes uniform contact with the opposite door leaf

Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the door seal periodically to ensure the door assembly to which it is fitted closes and latches properly.

