


FLOOR 10

MASONRY FLOOR (DUCT TO GRILLE)

DESCRIPTION

- 1 Load bearing cover grate required
- 2 Light gauge galvanised casing
- 3 Damper retaining bracket 1mm galvanised steel fixed with short self tapping screws
- 4 Mounting angles
- 5 LVH44 air transfer grille
- 6 M5 bolts for mounting angles.
- 7 Lorient intumescent sealant between casing and concrete slab
- 8 Lorient intumescent sealant between LVH44 and casing
- 9 Independent duct fixing complete with breakaway joints.

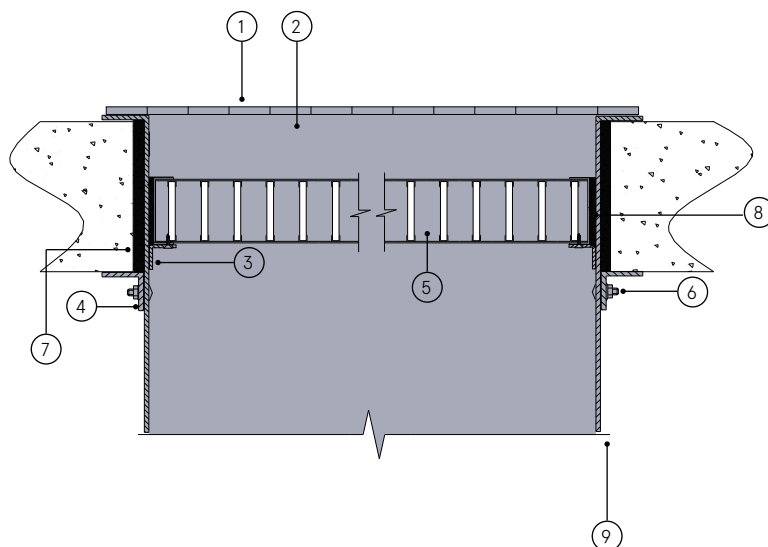

CONTENTS

- LVH44 air transfer grille

TOOLS REQUIRED

- Self tapping screws (3.2mm x 16mm)
- Masonry anchors
- Mounting flange
- Supporting bracket (20 x 20 x 1mm)
- Lorient intumescent sealant



Note: If no reticulating ductwork is above the slab a protective and load-bearing grate is necessary.

Masonry floor (duct to grille)

FR120

Fire Resistance in accordance with

BS 476-22:1987

Approval Ref

WFRC C121316 (F2)

Max single cell size

600mm x 600mm

LVH44 air transfer grilles are supplied 2mm less than the nominal size e.g. a 300mm x 300mm is actually 298mm x 298mm.

INSTALLATION INSTRUCTIONS

- ▶ Fix supporting bracket into the duct section either welded in place, or using M3 bolts.
- ▶ Fix the LVH44 into duct and seal around the perimeter with intumescent sealant.
- ▶ Fix to supporting angles with 3.2mm x 16mm self tapping screws.
- ▶ Check the mounting flange size is not less than twice the clearance between the LVH44 and opening.
- ▶ Lower the LVH44 into the floor opening.
- ▶ Fill the outside perimeter of the LVH44 with Lorient intumescent sealant.
- ▶ Fit mounting flanges on underside of floor using M5 bolts. Ensure flanges are hard against the floor and the fixings are adequately tightened. Check the LVH44 assembly sits squarely in the opening.
- ▶ Apply a bead of Lorient intumescent sealant between casing and the floor (note: maximum clearance of 10mm applies).
- ▶ Ensure convenient access is provided for easy inspection and cleaning as necessary.