




IS8005si Fitting Instruction

Automatic Door Bottom Seal

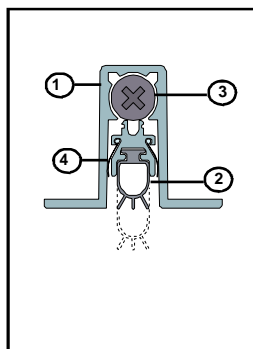

Length **35mm**

DESCRIPTION OF CONTENTS

- Aluminium Carrier (1)
- Flexible Gasket (2)
- Actuator button (3)
- Smoke fins (4)
- Bag containing
 1. 2 x end caps
 2. 6 x screws
 3. 1 x striker button
- Fitting Instructions

TOOLS REQUIRED FOR INSTALLATION

- Tape Measure
- Saw (Power or Hand)
- Screw Driver
- 2.5mm Drill Bit
- Drill (Power or Hand)
- Knife
- Pencil or marker
- Router
- 15mm long series router

INSTALLATION DETAIL

STEP 1

Remove the seal from the packaging .

(If the door bottom is already rebated to suit the seal dimensions, go to Step 6.)

STEP 2

Remove the door from its hinges, lay on side and firmly restrain.

STEP 3

With a tape and pencil, measure and mark the seal position on the bottom edge of the door. For optimum operation, the seal should be positioned on the centre line of the door.

STEP 4

Fit a 13mm cutter to the router and set guide. Machine a 13mm wide by 24mm deep slot along the bottom of the door. See Figure 1.

STEP 5

Clear chips and dust from rebate, check width and depth.

STEP 6

Measure the door width. Cut seal 2mm less than width of door—cut excess aluminium from the end of the seal **without** the operating button.

STEP 7

Centre and offer the seal to rebate and mark fixing hole positions on the edge

STEP 8

Drill pilot holes and then screw fix seal in position. See Fig 2

STEP 9

When the door leaf is re-fitted open and close the door observing the operation of the seal. Adjust accordingly by winding the operating button in or out. (For timber frames, fix the striker button to the frame opposite the operating button.)

Is seal movement needs adjustment to make less contact or full contact with floor, turn adjustable block clockwise to reduce movement or anticlockwise to increase the seal movement.

STEP 10

For optimum results the seal should be adjusted so that the seal element touches the sill in the final closing moment of the door.

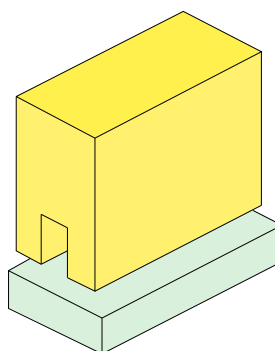


FIGURE 1

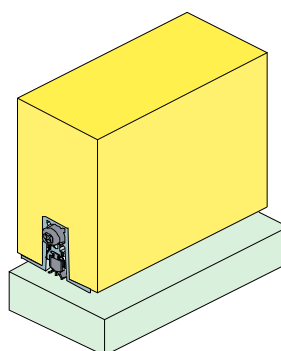


FIGURE 2

We recommend IS8005si automatic door bottom seal be used together with a Lorient HP2512BW series perimeter seal and, if required a 4000 series threshold plate.

IMPORTANT – Ensure that the installation of this product does not impede the opening or closing of the door. It is recommended to check the adjustment of the door seal periodically to ensure the door assembly to which it is fitted, closes and latches properly.

The seal may be removed for periodic cleaning or replacement of a worn gasket, without removing the door leaf from its frame.

OTHER INTEGRITY™ ARCHITECTURAL SEALS INCLUDE:

- Door Perimeter Seals
- Door Bottom Seals
- Automatic Door Bottom Seals
- Threshold Plates
- Brush Seals
- Magnetic Seals

Contact your nearest Lorient office for further details.

NOTE

Recommendations as to methods for use of materials and construction details are based on the experience and knowledge of Lorient and are given in good faith as a general guide and service to designers, contractors and manufacturers.

Lorient reserves the right to make alterations or delete any installation detail without prior notice.

CUT BACK SIZES

Do not cut the seal shorter than the lengths indicated below or this will affect the normal operation of the internal mechanism.

335mm	cuts to	255mm
435mm	cuts to	255mm
535mm	cuts to	436mm
635mm	cuts to	536mm
735mm	cuts to	636mm
835mm	cuts to	736mm
935mm	cuts to	836mm
1035mm	cuts to	936mm
115mm	cuts to	1036mm

AUSTRALIA
Lorient Australia Pty Ltd

QLD: (61-7) 3635 5000
NSW: (61-2) 9907 3844
VIC: (61-3) 9785 2688

ASIA PACIFIC—Hong Kong
Lorient Pacific Limited

Tel: (852) 2505 0328

EUROPE—UK
Lorient Polyproducts Limited

Tel: (44-1626) 834252

