FIRE DOOR 14

LVH44 AIR TRANSFER GRILLE FITTED INTO STEEL FRAME WITH ANGLE FIXINGS

DESCRIPTION


- 1 Steel frame as part of associated doorset framing system
- 2 Lorient intumescent sealant around LVH44 perimeter to a maximum clearance of 10mm
- 3 Lorient LVH44 intumescent air transfer grille
- 4mm intumescent liner 4
- Fixing angle: 20 x 20 x 1mm thick minimum 5 galvanised steel angles fixed to air transfer grille unit with self tapping screws and to steel frame with self tapping screws

Fixing option 1: 20mm wide angle tabs, central to all four sides or at 200mm maximum centres

Fixing option 2: Full width angles top and bottom only with 200mm fixing centres

CONTENTS


- TOOLS REQUIRED • LVH44 air transfer grille
 - Angle fixings
- 4mm graphite liner
- Self tapping screws
- Cover grille (optional)
- $(3.5 \times 16 \text{mm})$ Lorient intumescent sealant

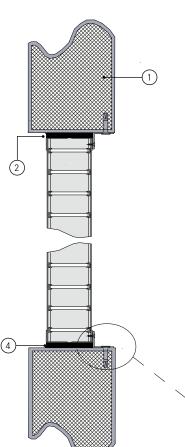

FIXING OPTION 1

22	7
	41
	11
	11
	11
	11
	11
	11
	٣
	11
	11
	41
	11

FIXING OPTION 2

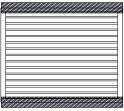

LVH44 for steel frame with angle fixings

FD120

Fire Resistance in accordance with

BS 476-22:1987

Approval Ref WFRC C121316 (AW4S1)

Max single cell size

Any rectangular shape up to 1200 x 600mm

LVH44 air transfer grilles are supplied 2mm less than the nominal size e.g. a 300mm x 300mm is actually 298mm x 298mm.

INSTALLATION INSTRUCTIONS

- Apply Lorient intumescent liner to the inside faces of the aperture.
- ▶ Fix the mounting angles onto the LVH44 air transfer grille using self tapping screws to one side only.
- Insert LVH44 into steel frame. (Note: air transfer grille does not have to be centrally positioned in the opening).
- Fix the angles to the steel frame with self tapping screws.
- Apply a bead of Lorient intumescent sealant around the perimeter of LVH44 as shown (note: maximum clearance of 10mm applies).
- Note: Fixings supplied by others.

